



TRF7970 BoosterPack Simplified Schematic



LAUNCHPAD PINOUT

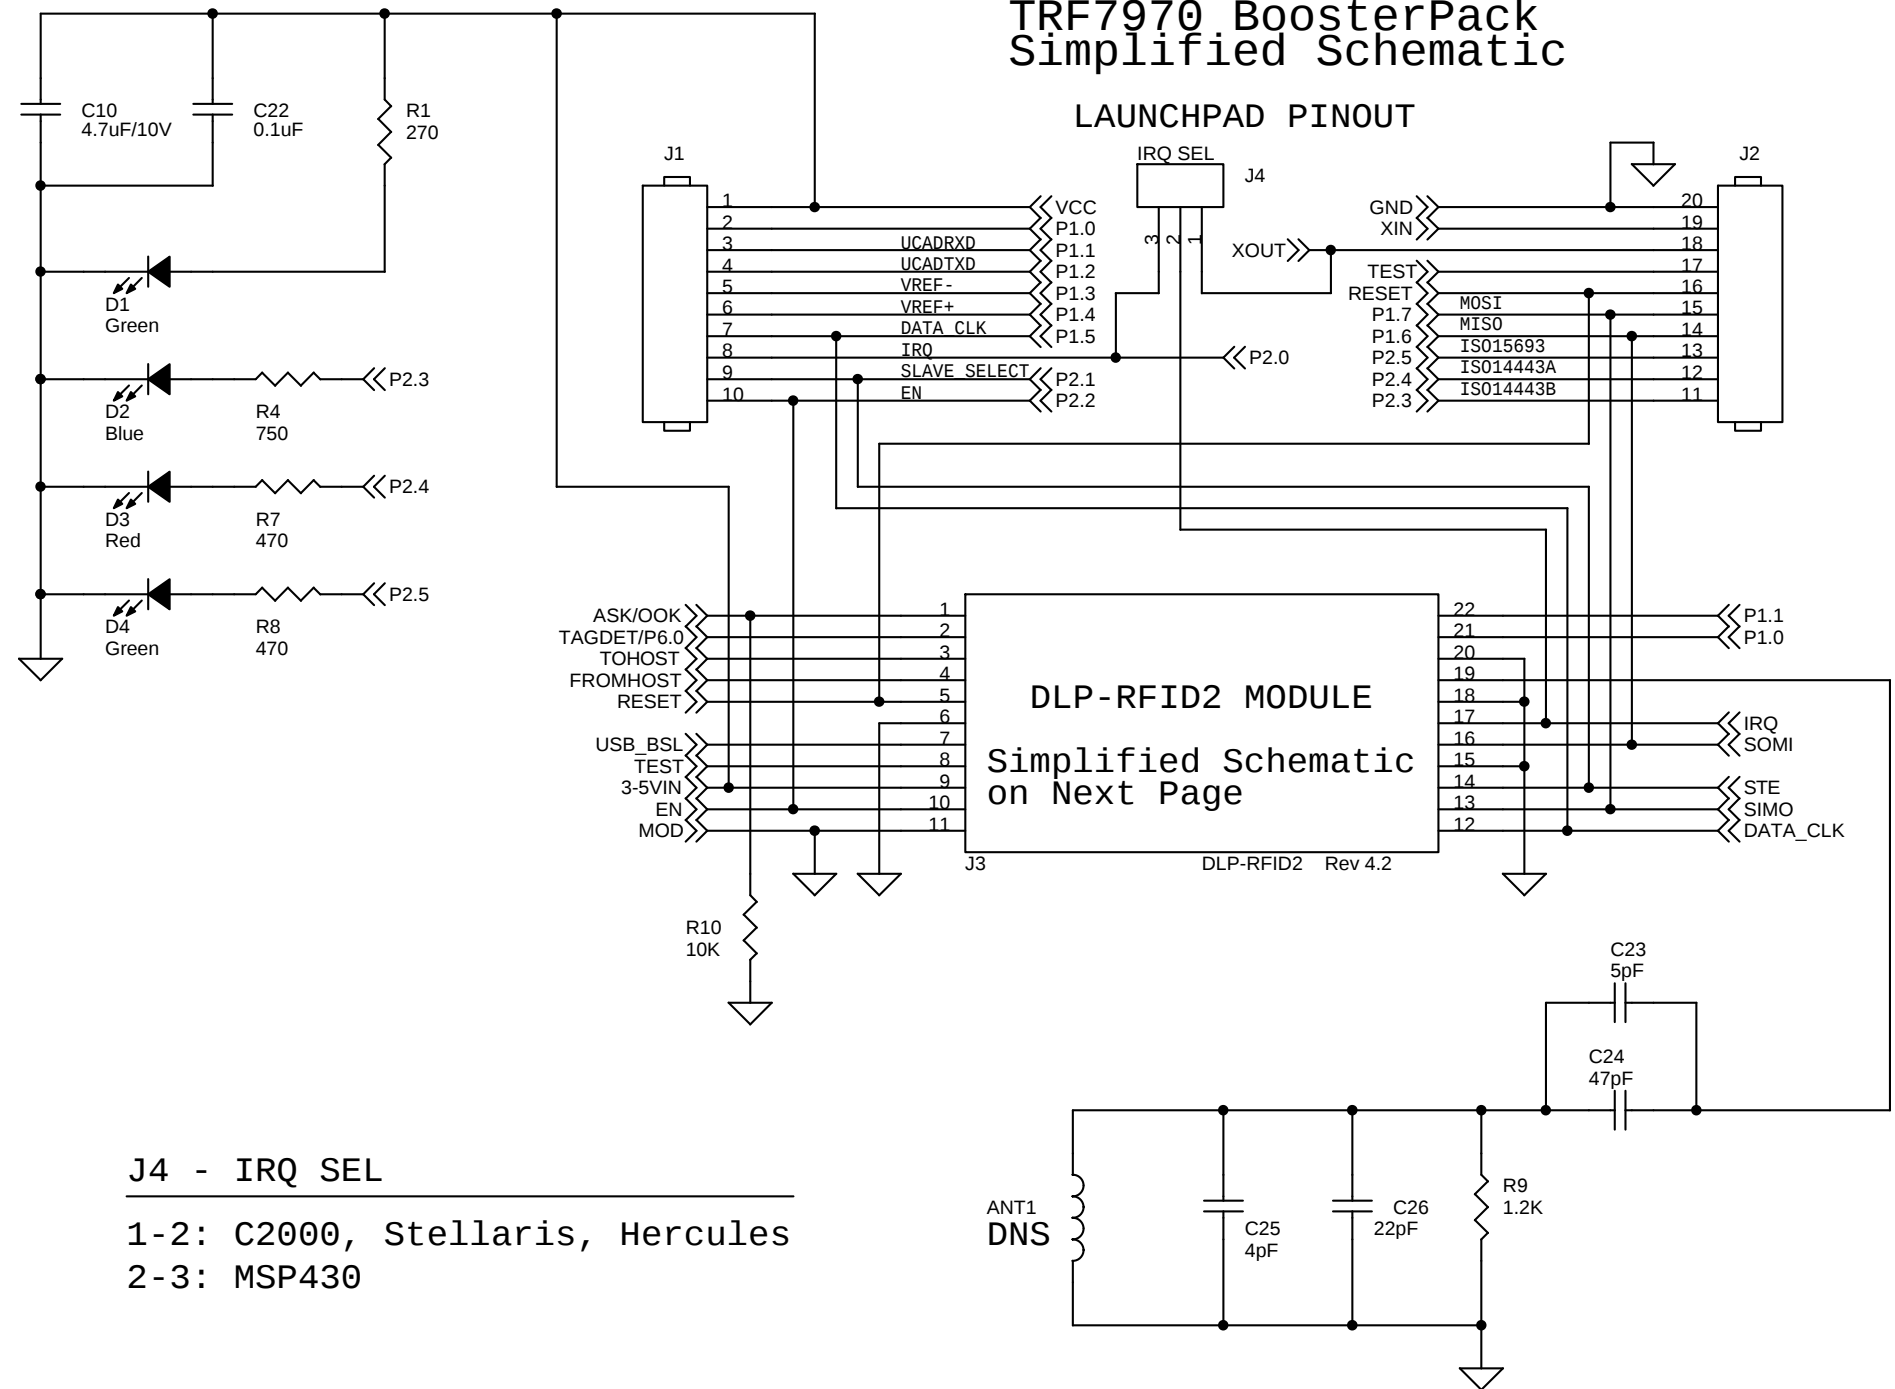


DLP-RFID2 v4.2 For BoosterPack

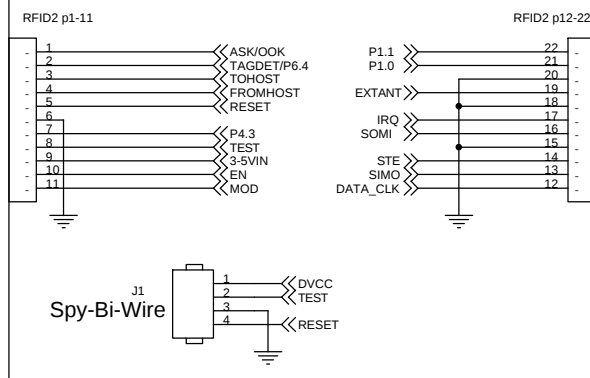

Port Pin P1.1:
High = RF1 = Internal Antenna
Low = RF2 = External Antenna

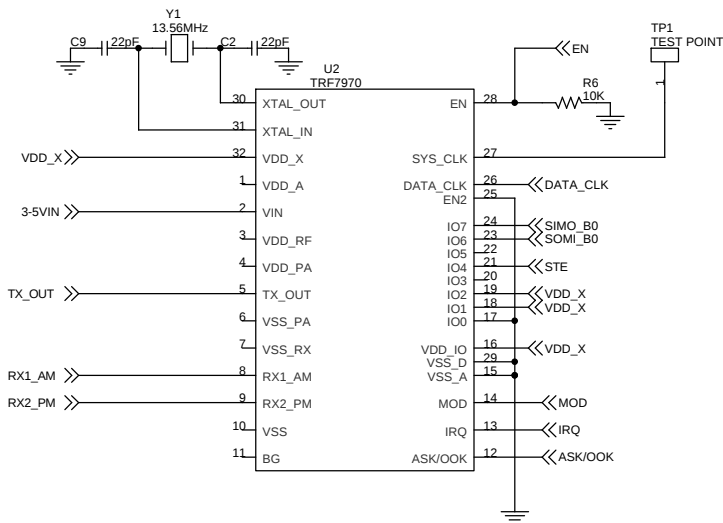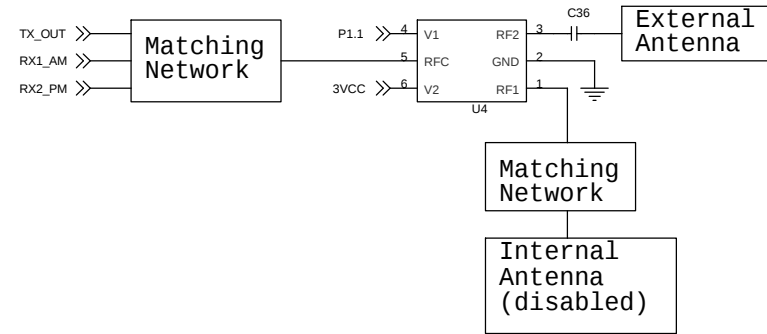

This micro is not installed for the
DLP-7970ABP. The micro on the LaunchPad
is used to operate the TRF7970A on the
BoosterPack.

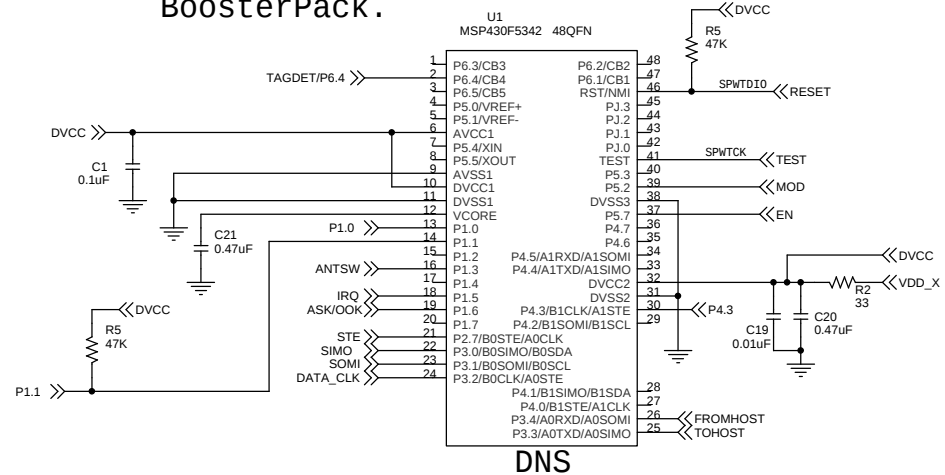

DNS